


NORDISK LEGACY

SINCE 1901

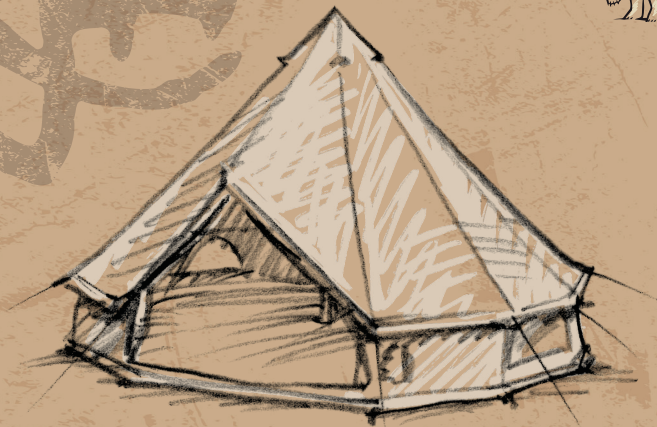

ASGARD 12.6

FAMILY / GROUP TENT

Product book

CONGRATULATIONS!

We wish you lots of fun with your new Nordisk Cotton tent

GLÜCKWUNSCH

TILLYKKE!

FÉLICITATIONS

おめでとうございます

GEFELICITEERD!

GRATULACJE

축하

祝賀



LOVES YOU


BUILD UP INSTRUCTION

1

Spread out the tent and loosely attach a few straps to the ground using the tent pegs. Loosen all guy ropes and close door before you head to the next steps.

1

If you have bought the matching Nordisk „Zip In Floor“ for your tent first step is to zip this onto the tent.

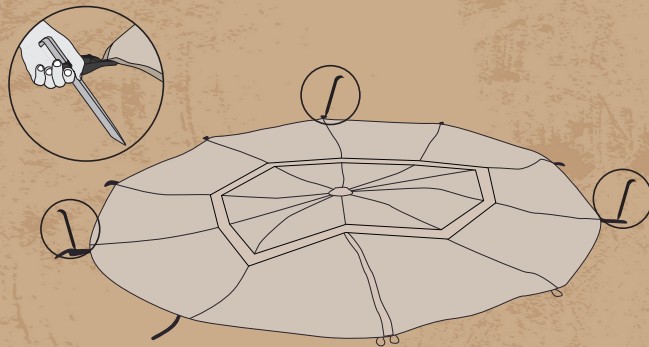


ASGARD 12.6




2

Open the entrance and place the center pole inside the tent. Place the top of the pole in the center of the roof top and lift up the tent. When erected the bottom of the pole must be placed at the center of the ground, or if you have the floor, in the center of this.

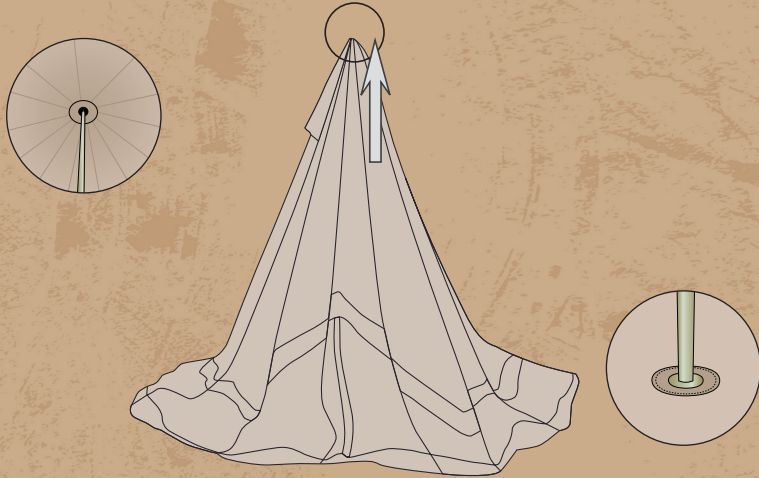
**3**

Place the A-pole in the entrance section now. The peak of it needs to be pushed through the eyelet at the roof of entrance. Place both pole ends in the pockets which are attached to the zip in floor. Then close the entrance again and secure the tent with a guy rope from the A-pole.

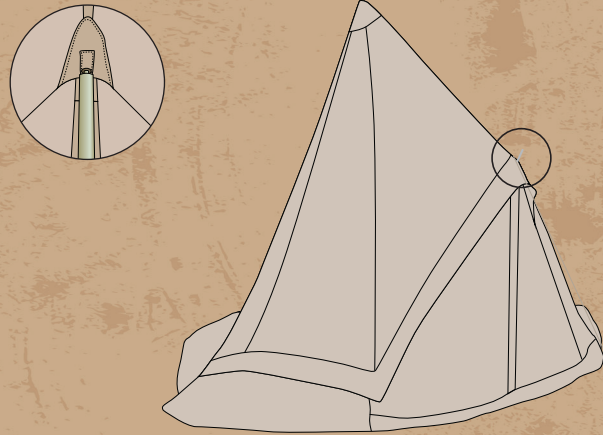

4


Erect the tent by inserting all remaining pegs and tighten the guy ropes. Use the adjustment function of the extendable center pole for a better stand. Ensure the door is closed to avoid too much tension on opening.

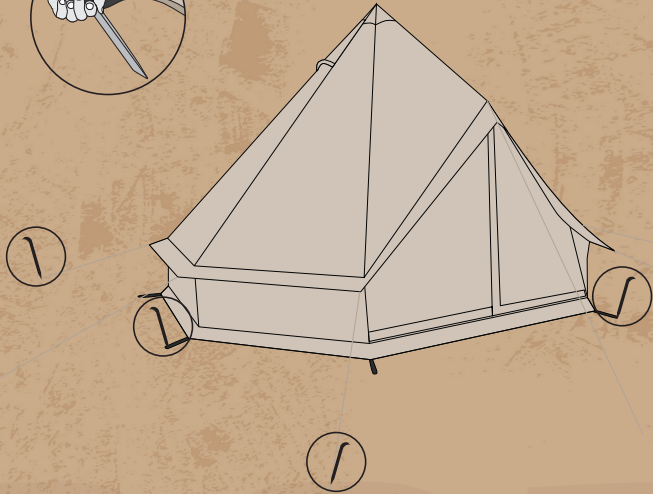

5

If you have the matching inner cabins for your Nordisk Cotton tent, you can now attach this inside.

Find the coloured connection point which indicates where to connect your inner cabin to the tent. Attach the buckle followed by the remaining connection points.

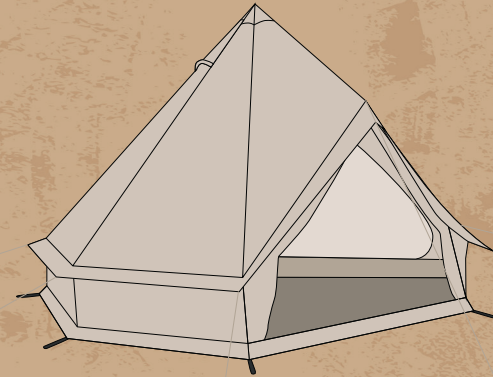

TAKE CARE OF YOUR NORDISK COTTON TENT

Before Trek

- build up the tent from home and **check if everything is ok**.
- **know the environment** you'll go to (sand, hard soil, snow), and check that pegs etc. matches this
- **check that the poles are ok**, and if not; buy a new set before you go
- make sure the **tent is clean**
- ensure that **zippers runs smoothly** (if not, get some zipper spray)

Trek·Camp·Live

NORDISK™



In the Camp

- make sure you **pitch on an even and big enough surface**
- **remove sharp rocks and sticks** that could harm the tent floor
- **stretch the tent as much as possible** for optimal strength and water repellency
- if wet or very windy, you need to **re-adjust the tension of the guy ropes**
- if very windy, **use extra guy ropes and pegs** for stability
- **put the packsack somewhere where you can find it again**
- **avoid fire and smoke** near the tent – be aware of wind directions!
- keep an eye on **guy rope tension** once in a while
- **remove all traces from your camp**

Living with your tent

- **do not use any sort of coating** – a clean cotton tent has the best water repellency
- **keep it clean with a soft sponge or brush**
- use **no harsh chemical cleaning** or machine washing
- **keep it dry**, and if packed down wet, remember to dry it as soon as possible – remember that a wet tent is heavier than a dry one
- **store in dry surroundings**
- **check guy ropes and pegs** once in a while, and buy new ones if damaged
- if you have **damaged poles**, your local Nordisk dealer can supply new ones
- be aware that long **exposure of sunlight can degrade the fabric**
- love and nurse your tent. **If you protect your tent, it will protect you**

You can find more information on nordisk.eu

NORDISK™

Tips & Tricks

- 1 Do not coat your cotton tent with anything – keep the cotton fabric as it is
- 2 Put rain caps on the poles when it's raining
- 3 Installing the inner cabin can give you an even better climate
- 4 The windows in the sides can open, with or without mosquito net
- 5 Use the mosquito net in the doors to enjoy the view in the evening
- 6 Adjust the center pole to increase or decrease tension on the tent



Scan it!

For 360° View, Windtest, How to pitch & Fact sheet



Download app:

From the AppStore:

Nordisktents



LEGACY ORIGINAL SPARE PARTS

Makes your Nordisk Cotton tent last longer...

Spare parts available!



Guy rope, 5,0 mm, 20 meter
Item no.: 119048



Guy rope, 3,5 mm, 20 meter
Item no.: 800



Guy rope, 5,0 mm, 20 meter
Item no.: 801



Mosquito mesh, 10 meter
Item no.: 807



 
Velcro for zipper flaps and door
Item no.: 809



Full cover rain cap
Item no.: 810



Nylon webbing with ladder lock
Item no.: 802



Adhesive fabric patch
Item no.: 803 Technical cotton
804 Green cotton



Fabric roll, 10 meter
Item no.: 840 Technical cotton
841 Green cotton



Rubber part for center pole
Item no.: 811-813



YKK zipper slider with puller
Item no.: 814



Webbing loop for A frame
Item no.: 815



Ventilation hook
Item no.: 805



Zipper puller
Item no.: 806



Cord stopper
Item no.: 808



8-hook for inner tent
Item no.: 816



Triangular slider
Item no.: 119045



Alu. hook for inner tent
Item no.: 819

LEGACY ORIGINAL SPARE PARTS

Makes your Nordisk Cotton tent last longer...



Fly sheet pack sac



Tarp packsack

Item no.: 828 - Kari 12m²
829 - Kari 20m²
830 - Kari Diamond 12m²



Peg bag

Item no.: 817



Steel V-peg

Extreme hold and grip
Item no.: 119039



Skewer

Strong galvanized steel
Item no.: 119038



Pole bag

Item no.: 818



Inner tent packsack

Item no.: M - 842
L - 843



Zip-in floor bag

Item no.: S - 824
M - 825
L - 826
XL - 827



 
Steel T peg

Extreme strong T shape
Item no.: 119037



Steel nail

Extreme grip and superior strength
Item no.: 119040



Compression webbing for poles

Item no.: 820



Compression webbing for tents

Item no.: 822 - 25mm
823 - 38mm

Spare parts available!

Contact your local Dealer

NORDISK™

Original spare parts



www.nordisk.eu

Nordisk International

Papirfabrikken 74
DK-8600 Silkeborg
Tel. +45 7373 4000
Fax +45 7373 8015
info@nordisk.eu

Denmark, International

Nordisk Germany

Max-Weber-Strasse 16
D-25451 Quickborn
Tel. +49 (0) 4106 76770
Fax +49 (0) 4106 767714
info@nordisk.de

Germany, Austria, Switzerland