



## Thule BC Adapter Dethleffs

# › Instructions

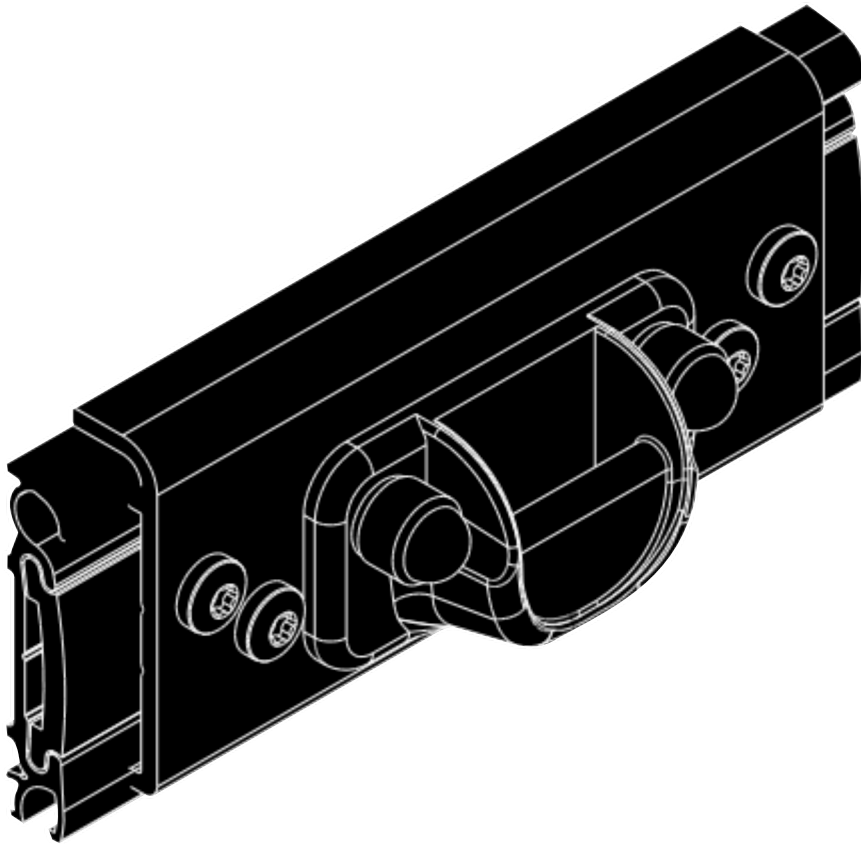

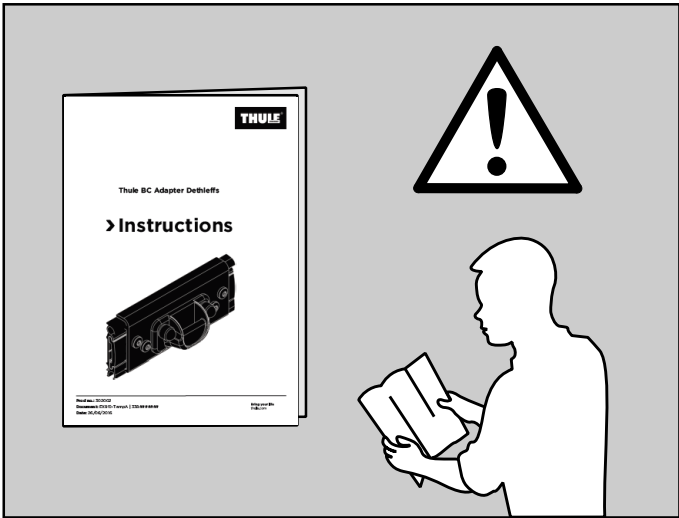


**(A) x2**


Ø6,5 mm  
Ø12 mm  
n°10  
Torx TX25

 <b>(B)</b> x4 DIN 603 - A2 M6 x 16 mm	 <b>(C)</b> x4 DIN 985 - A2 M6	 <b>(D)</b> x4 DIN 125 - A2 M6	 <b>(E)</b> x4 Nut Cap M6
 <b>(F)</b> x8 Ø10-Ø6 x10mm	 <b>(G)</b> x8 ISO 145858 - A2 Ø5,5 x 50 mm		


1

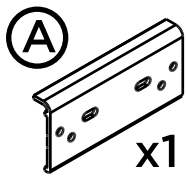


x1

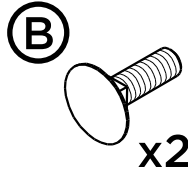


x2

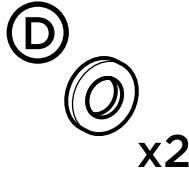

x2

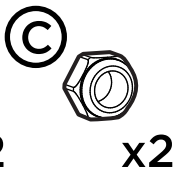


x2

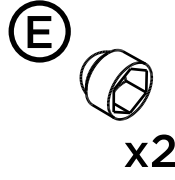

x2




n°10

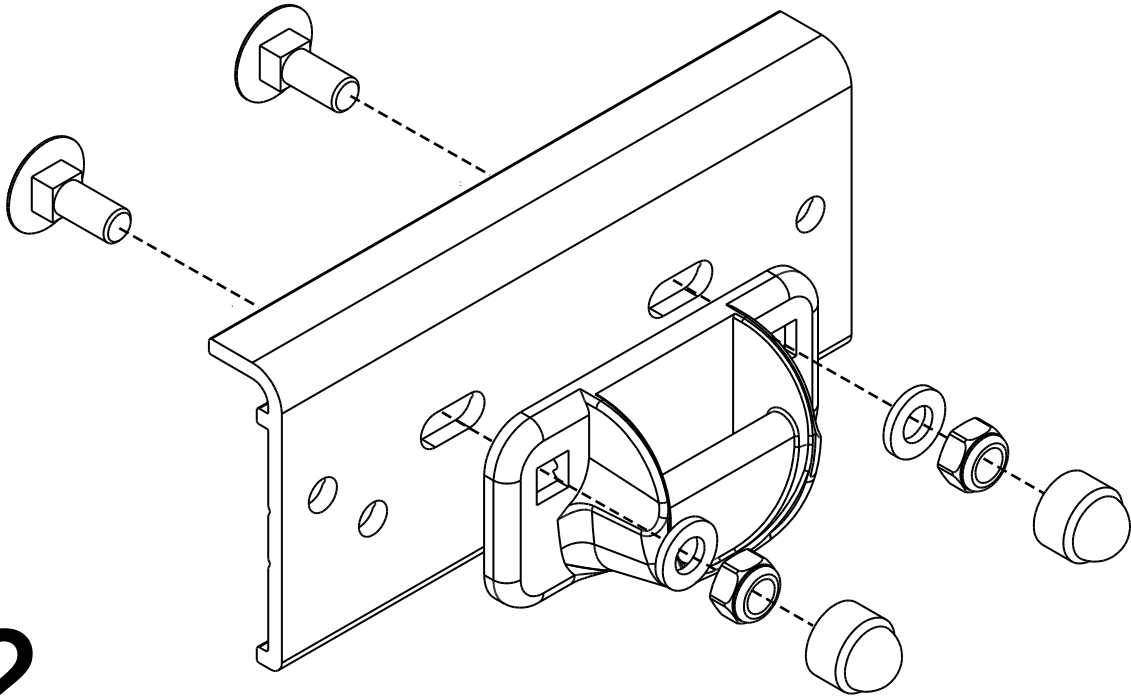



x2

2

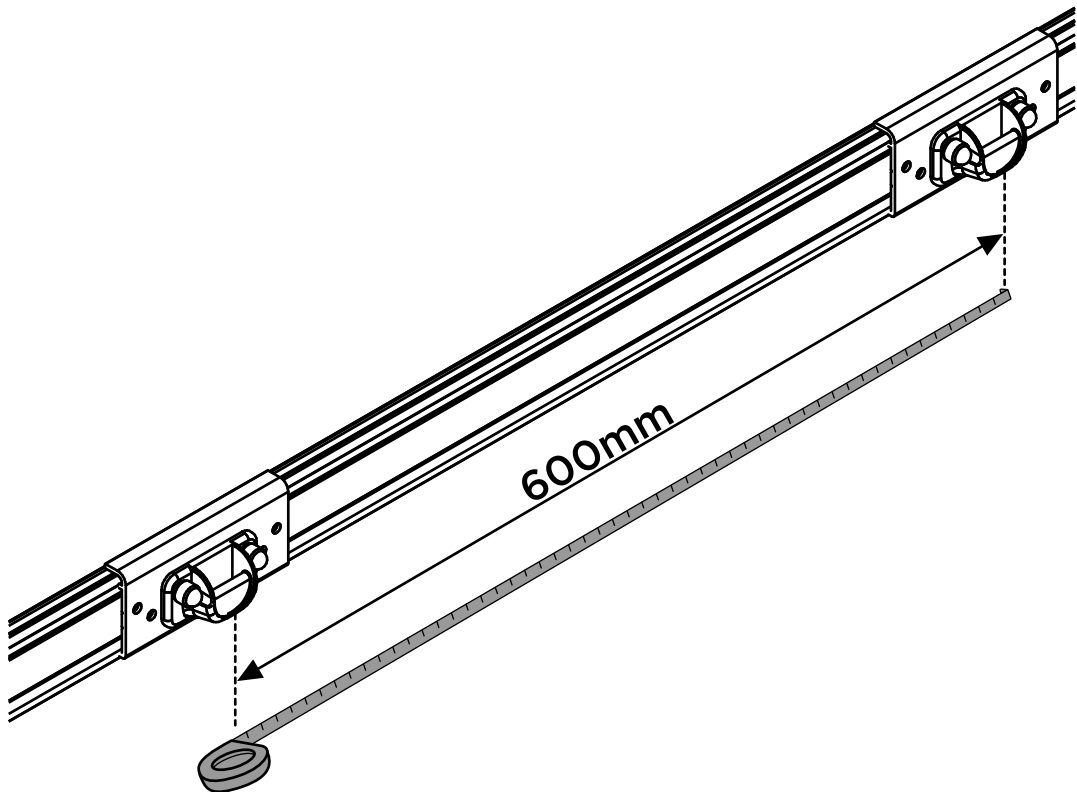

600mm



3

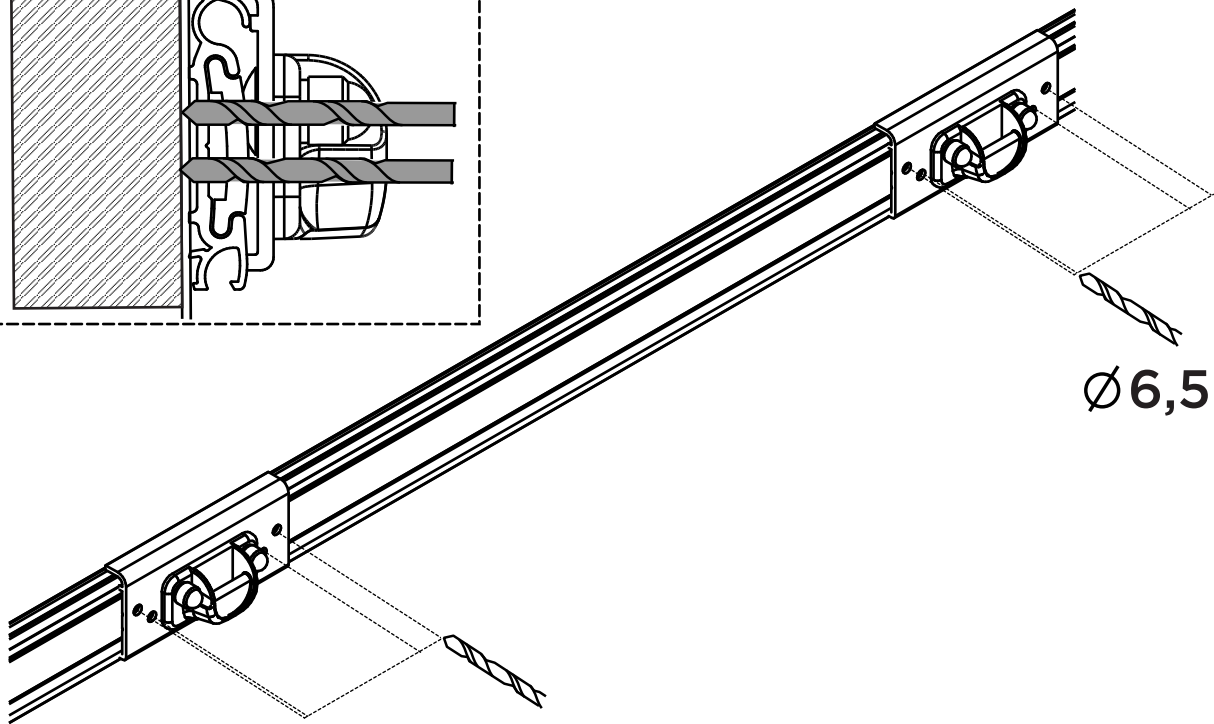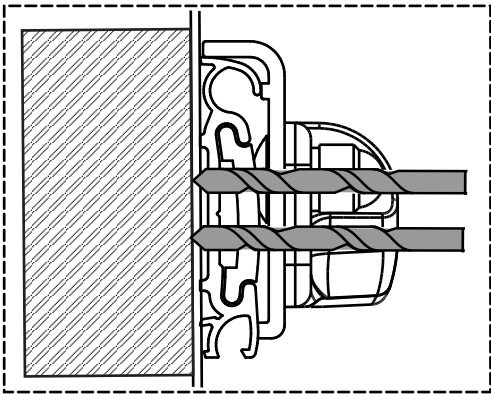

Ø 6,5mm

Ø 6,5mm



4

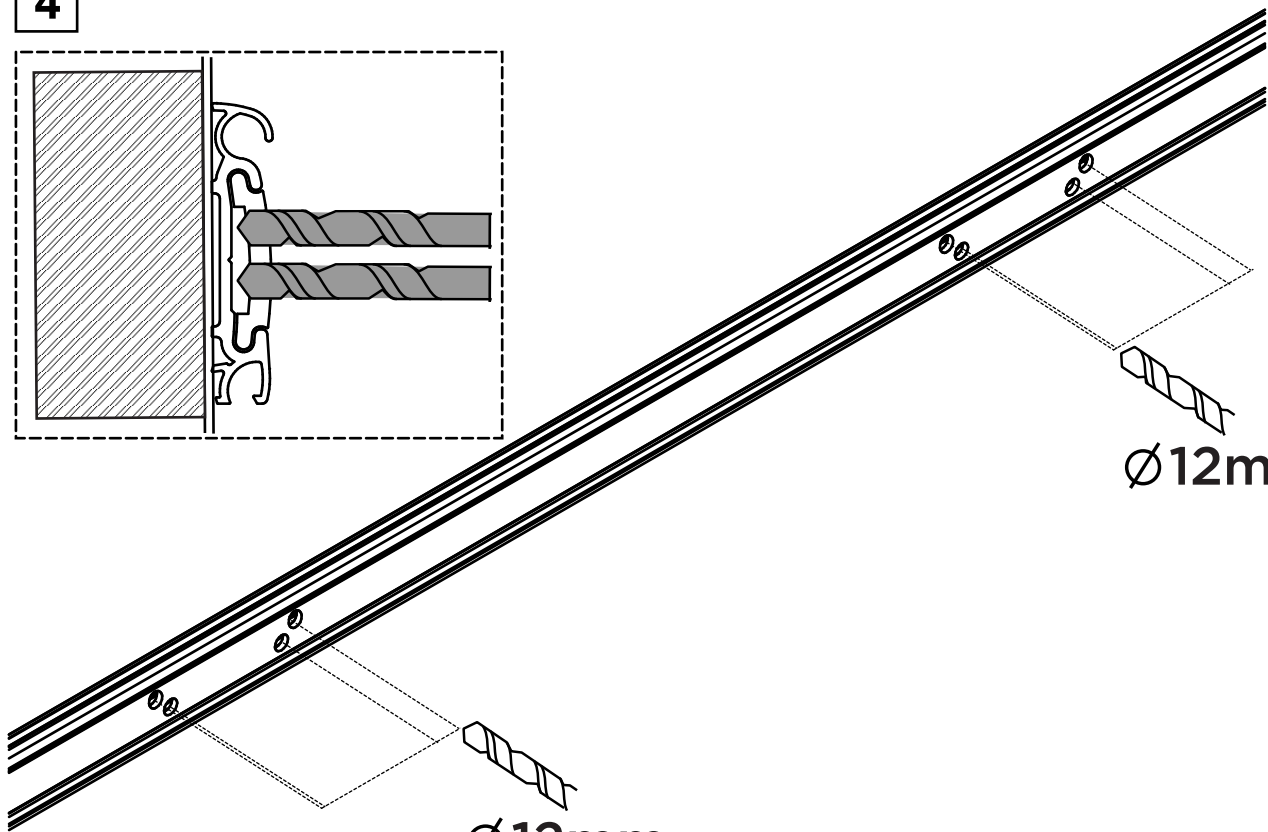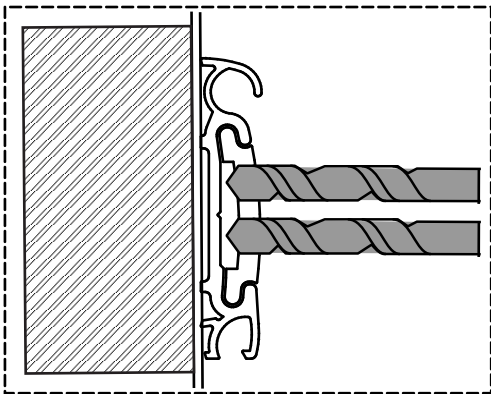



Ø 12mm

Ø 12mm

5

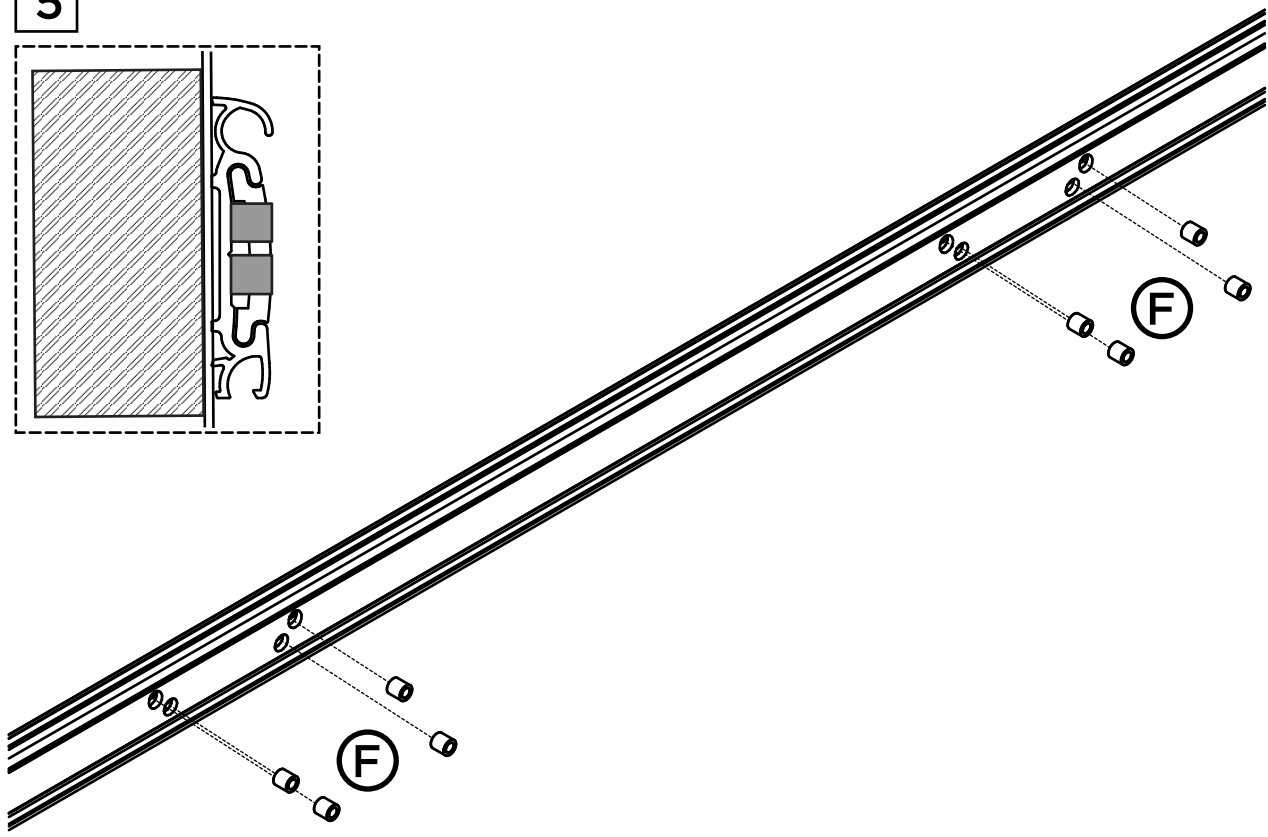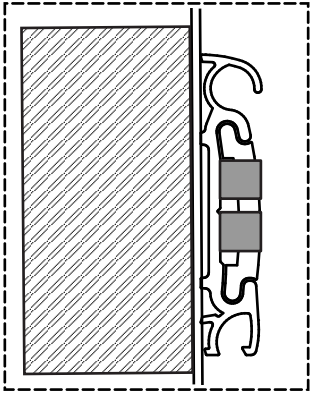


6

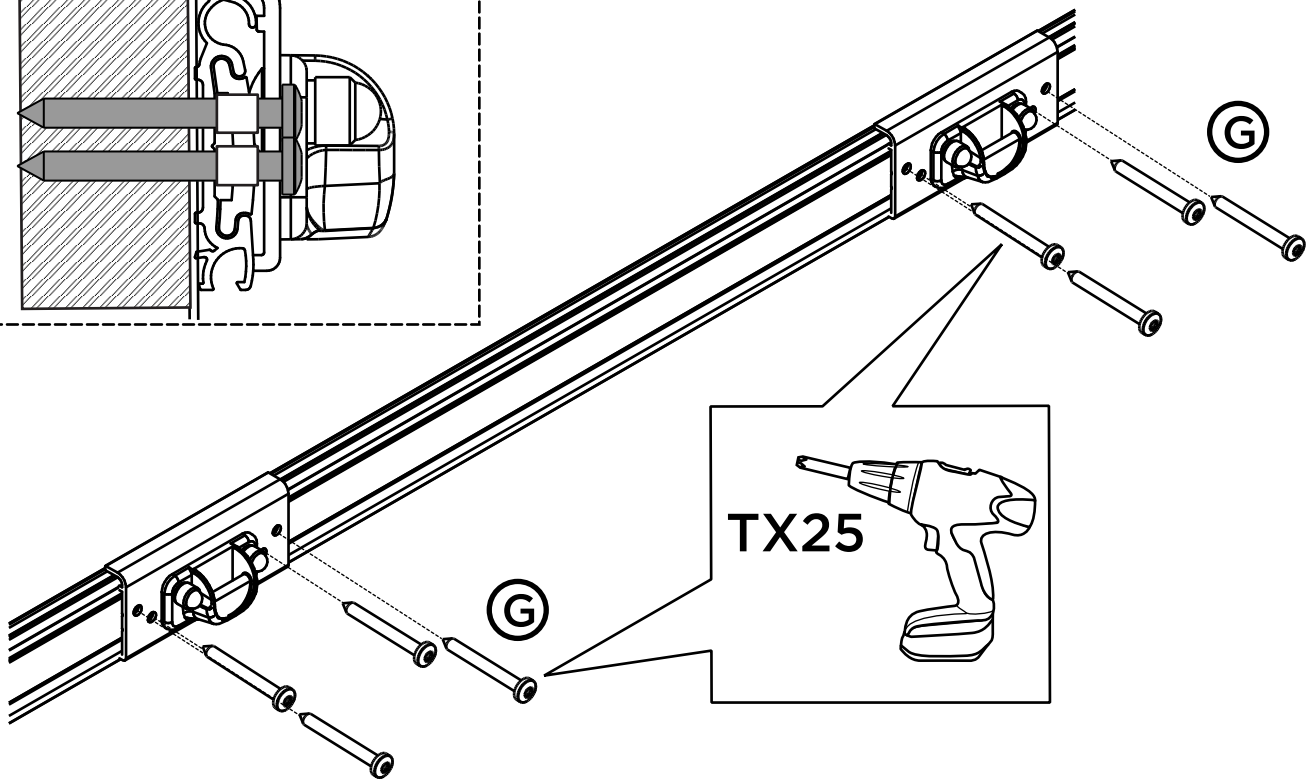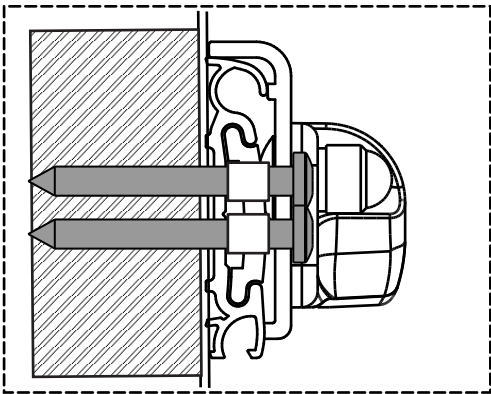





**Position Dethleffs**

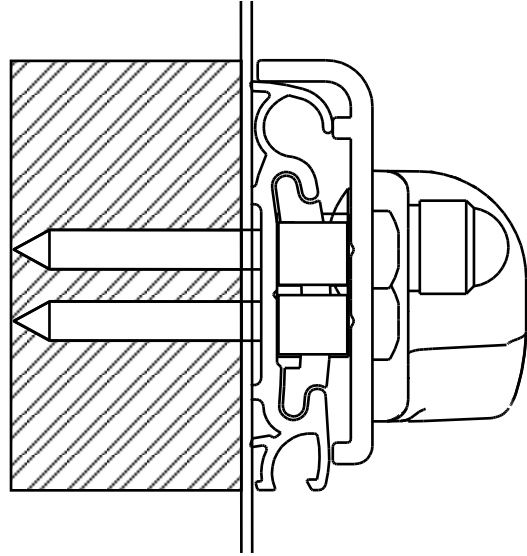

**Position Carado & Sunlight  
(since 2016)**

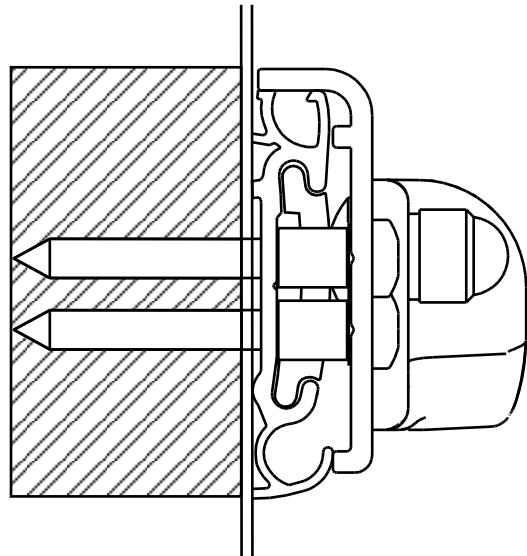

**Thule Top Brackets**  
1 set included with Bike Carrier

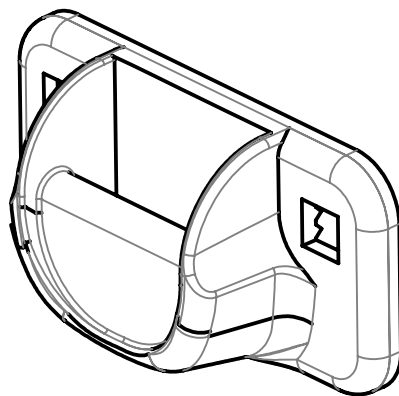

**x2**



